


**TECHNICAL DATA** 

# Fluke TruTest™ Data Management and Reporting Software

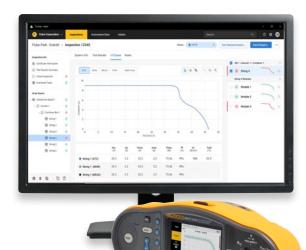

# STREAMLINED DATA MANAGEMENT

Manage test results, client and site data with ease, and create reports quickly using the intuitive, modern user interface and custom-report builder

## **CREATE CUSTOM AUTO-TESTS**

Choose from pre-defined automatic test codes, or create your own to ensure technicians gather the right data at the right site

### DASHBOARD INTERFACE


On-screen intuitive dashboard interface allows the user to see the status of all their clients instantly and navigate to further levels of detail if desired

# The easy-to-use data management solution

Fluke TruTest Software is designed to eliminate the hassle associated with traditional electrical system data management and reporting. Whether you are testing fixed wire installations, or appliances in an office, verifying repairs in a workshop, or performing annual inspections proper data management is critical for producing easy-to-understand reports for clients. Compatible with a growing list of Fluke and Beha-Amprobe test and measurement devices TruTest Software allows you to quickly and easily import measurement results directly from your test instruments, manage files transferred from instruments, or manually enter data as needed.

With a streamlined user interface and intuitive workflow, measurement data can be easily formatted into printable test certificates and reports complete with your company logo and electronic signature.

- · Easily manage measurement data
- Quickly create test certificates and reports
- Free updates for 5 years after installation
- Easy data collection and database transfers
- Enables manual data entry
- · Intuitive user interface
- Fast and simple operations

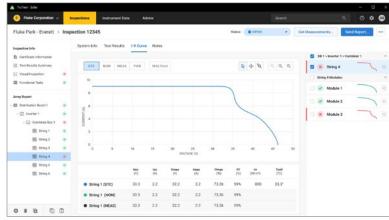

Solar SMFT software showing I-V curve





# **Compatibility**

 $TruTest^{TM}$  is compatible with a growing list of Fluke and Beha-Amprobe test instruments including the following:

# Multifunction PV Tester and Performance Analyzer

• Fluke SMFT-1000

# **Portable Appliance Testers**

- Fluke 6500
- Fluke 6500-2
- Beha-Amprobe GT-600
- Beha-Amprobe GT-650
- Beha-Amprobe GT-800
- Beha-Amprobe GT-900

#### **Installation Testers**

- Fluke 1653
- Fluke 1653B
- Fluke 1654B
- Fluke 1662
- Fluke 1663

Fluke 1664 FC

- Beha-Amprobe ProInstall-100
- Beha-Amprobe ProInstall-200

Databases from the Fluke DMS Software or Beha-Amprobe ES Control software can also be converted and transferred to the TruTest Software platform\*. Microsoft Access Runtime 2016 is required for the DMS/EsControl database conversion.

(\*) see TruTest manual for further details.

### **Comprehensive Reporting**

Fluke TruTest Software simplifies the reporting process so you can produce easy-to-understand test certificates and reports as quickly as possible, saving you time and money. A growing list of regional reports including DIN VDE 0701-0702, ÖVE/ÖNORM E 8701, SNR 462638, NEN3140, IEC 62446-1 and EU directive 2009/104/EC (BetrSichV). All of these reports are available at the touch of a button, and a pre-configured international template ensures that no matter your location TruTest Software has you covered.

# **Tree topology**

Hierarchical tree topology is used to represent clients, sites, inspections with customizable asset levels including distribution boards, inverters, combiner boxes, strings and individual modules, making it ideal for use in PV systems of varying sizes while allowing you to maintain testing and reporting flexibility. Each element is presented as a single tree node and the properties of each node are presented after selection. Tree topology can be maintained by adding nodes, deleting nodes, duplicating nodes, duplicating subtrees and node editing.

# **Demo software and software packages**

Free demonstration software is available at **www.fluke.com/trutestsoftware**. After downloading start the installation by double clicking on the software file. The setup program will guide you through the installation procedure. Please follow the installation instructions displayed on the screen.

After purchasing  $TruTest^{TM}$  Lite or  $TruTest^{TM}$  Advanced, you will be provided with a code that will give you full access to the features purchased.



# **Solar reporting solution**

Fluke TruTest™ Software now supports the SMFT-1000 Multifunction PV Tester and Performance Analyzer. Whether you are analyzing panel efficiency through I-V curves, or safety testing the system through the Category 1 test regime in conformance to IEC 62446-1, proper data management is critical for producing easy-to-understand reports for clients. Import measurement results directly from your solar multifunction tester to computer, organize and analyze the data, compare individual asset data against previous measurements imported and provide a comprehensive and visual client report.





# **Specifications**

Function	Demo	Lite	Advanced
Database structure (Local standalone or server based)	Local	Local	Local
Portable Appliance Tester (PAT) module	•	•	•
Portable Appliance Testers supported	Fluke 6500, Fluke 6500-2, Beha-Amprobe GT-600, Beha-Amprobe GT-650, Beha-Amprobe GT-800, Beha-Amprobe GT-900		
Maximum addable clients	1	2	Unlimited
Maximum addable sites/client	2	5	Unlimited
Maximum addable locations/client	5	50	Unlimited
Maximum addable appliances/client	20	1000	Unlimited
Installation Testers (INST) module	•	•	•
Installation Testers supported		ı , Fluke 1654B, Fluke 1662, Fl ProInstall–100, Beha–Amprob	
Maximum addable clients	1	2	Unlimited
Maximum addable sites/client	2	5	Unlimited
Maximum addable locations/client	5	25	Unlimited
Maximum addable appliances/client	50	200	Unlimited
Solar Multifunction Tester module	•	•	•
	•		•
Solar multifunction tester supported		Fluke SMFT-1000	
Maximum addable clients	1	10	Unlimited
Maximum addable site/client	2	5	Unlimited
Maximum addable strings	5	50	Unlimited
Maximum addable modules (per string)	50	50	Unlimited
Include demo database	•	•	•
Create clients	•	•	•
Rename clients		•	•
Delete clients	•	•	•
Create nodes	•	•	•
Move nodes	•	•	•
Rename nodes		•	•
Delete nodes			
Delete flowes			
Edit client information		•	•
Edit site information		•	
Edit location information		•	•
Edit appliance information		•	•
Edit test information		•	•
Edit distribution board information		•	•
Edit circuit information		•	•
Edit inverter information		•	•
Edit combiner box information		•	•
Edit string information		•	•
Edit module information		•	•



# **Specifications (continued)**

Add test starp Delete test step Delete test step  Add remarks Add attachment (file) to remark Built remark Bu	Function	Demo	Lite	Advanced
Delete continuents Add engineers Patt designeers Patt designee	Add test step		•	•
Add remarks Add attachment filely to remark Edit remark Delete remark Demo instrument Demo instrument Demo company Demo logo Dem			•	•
Add remarks Add attachment (file) to remark Edit tenark Delete remark  Read data from instrument Read data from file Read data conflict management Read data conflict management Read data sasign tree structure Load data to instrument Use search Use search Show reports With watermark Show certificates With watermark Show certificates With watermark Show certificates With watermark Show ppp KML, J/Print certificates With watermark Demo engineers Add engineers Add engineers Delete engineers Read it instruments Demo instrument Read test instruments Delete test instruments Demo instrument Read test instruments Demo instrument Delete test instruments Delete test instruments Read test instruments Demo instrument Demo company Demo logo Demo logo Porni flagioners Auto Test Codes Print flagioners Auto Test Codes Print flagioners Auto Test Codes Print Customized Auto Test Codes Print Customized Auto Test Codes Print Customized Auto Test Codes Delete test instrumed Auto Test Codes Print Customized Print Print Print Print Print Print Print Print Print Pr	-		•	•
Add attachment [file] to remark Edit remark Delete remark  Pint test instruments Edit my company info Edit centification logo Demo logo				
Edit remark Delete remark Delete remark Delete remark Delete remark Delete remark Delete remark Description Show reports Show reports Show reports Show reports Show reports Show reports Demo engineer Demo engineer Delete engineers Demo instrument Delete eta instruments Demo instrument Delete text instruments Demo instrument Demo company Delete text instruments Delete dex instruments Delete dex instruments Delete dex instruments Delete existination Demo instrument Delete dex instruments Demo logo	Add remarks		•	•
Edit remark Delete remark Delete remark Delete remark Delete remark Delete remark Delete remark Description Show reports Show reports Show reports Show reports Show reports Show reports Demo engineer Demo engineer Delete engineers Demo instrument Delete eta instruments Demo instrument Delete text instruments Demo instrument Demo company Delete text instruments Delete dex instruments Delete dex instruments Delete dex instruments Delete existination Demo instrument Delete dex instruments Demo logo				•
Read data from instrument Read data from file Read data nonflict management Read data sonflict management Read data from Institute and Read Read Read Read Read Read Read Rea			•	•
Read data from instrument Read data from file Read data conflict management Read data conflict management Read data sasign tree structure Load data to instrument  Use search  Show reports With watermark With watermark Now Certificates With watermark Now Reports Save (PDE, XML,)/Print reports Save (PDE, XML,)/Print certificates  Add engineers Delote engineers Delote engineers Delote test instruments Demo instrument Delote test instruments Delote test instruments Print test instruments Print test instruments Delote test instruments Delote any ompany info Demo company Demo logo Demo logo Demo logo Demo logo Demo logo Demo logo Edit certification logo Demo logo Dem			•	•
Read data from file Read data conflict management Read data conflict management Read data so instrument  Use search  Use search  Show reports Show reports Show reports Show reports Show certificates With watermark Show certificates With watermark Save [PDF, XML]/Frint reports Save [PDF, XML]/Frint repor				
Read data from file Read data conflict management Read data conflict management Read data so instrument  Use search  Use search  Show reports Show reports Show reports Show reports Show certificates With watermark Show certificates With watermark Save [PDF, XML]/Frint reports Save [PDF, XML]/Frint repor	Read data from instrument	•	•	•
Read data conflict management Read data assign tree structure Load data to instrument  Use search  • • • • • • • • • • • • • • • • • •		•	•	•
Read data assign tree structure Load data to instrument  Use search  * * * * * * * * * * * * * * * * * * *		•	•	•
Load data to instrument  Use search  * * * * * * * * * * * * * * * * * * *		•	•	•
Use search  • • • • • • • • • • • • • • • • • • •		-		*
Show reports Show certificates With watermark Save (PDF, XML,)/Print reports Save (PDF, XML,)/Print certificates  Add engineers Demo engineer Edit engineers Delete engineers Delete engineers Delete test instruments Demo instrument Delete to set instruments Demo logo D	Boad data to instrument			
Show reports Show certificates With watermark Save (PDF, XML,)/Print reports Save (PDF, XML,)/Print certificates  Add engineers Demo engineer Edit engineers Delete engineers Delete engineers Delete test instruments Demo instrument Delete to set instruments Demo logo D	Use search	•	•	
Show certificates Save [PDF, XML]/Print reports Save [PDF, XML]/Print certificates  Demo engineer Add engineers Delete engineers Delete engineers Delete engineers Delete engineers Delete engineers Add test instruments Delete instruments Demo instrument Delete thin truments Demo logo Demo lo				
Show certificates Save [PDF, XML]/Print reports Save [PDF, XML]/Print certificates  Demo engineer Add engineers Delete engineers Delete engineers Delete engineers Delete engineers Delete engineers Add test instruments Delete instruments Demo instrument Delete thin truments Demo logo Demo lo	Show reports	With watermark	•	
Save (PDF, XML,) / Print reports Save (PDF, XML,) / Print certificates  Add engineers Demo engineer Delete engineers Delete engineers Print engineers Demo instrument Demo instrument Demo instrument Demo instrument Demo instruments Demo in				•
Save (PDF, XML,)/Print certificates  Add engineers  Demo engineer  Edit engineers  Delete engineers  Delete engineers  Print avoiries Auto Test Codes  Print favorites Auto Test Codes  Create customized Auto Test Codes  Create customized Auto Test Codes  Print		With Waterman	•	•
Add engineers  Edit engineers  Demo engineer  Delete engineers  Print engineers  Print engineers  Add test instruments  Demo instrument  Edit test instruments  Delete test instruments  Demo company  Edit company info  Demo company  Demo logo  Demo logo  Edit certification logo  Demo logo  Demo logo  View Auto Test Codes  Select favorites Auto Test Codes  Print All Auto Test Codes  Create customized Auto Test Codes  Edit customized Auto Test Codes  Edit customized Auto Test Codes  Create customized Auto Test Codes  Print Clavorites Auto Test Codes  Edit customized Auto Test Codes  Print Clavorites Auto Test Codes  Create customized Auto Test Codes  Print Clavorites Auto Test Codes  Create customized Auto Test Codes  Print Clavorites Auto Test Codes  Create backup  Restore backup  Restore backup  Add users  I Demo user  2 Unlimited  Add users			•	
Edit engineers Delete engineers Print captineers Add test instruments Demo instrument Delete test instruments Demo instruments Delete test instruments Delete test instruments Delete test instruments Delete test instruments Demo company Edit my company info Demo company Edit company logo Demo log	bave (1 b1, Awii,),111111 certificates			
Edit engineers Delete engineers Print captineers Add test instruments Demo instrument Delete test instruments Demo instruments Delete test instruments Delete test instruments Delete test instruments Delete test instruments Demo company Edit my company info Demo company Edit company logo Demo log	Add engineers	Demo engineer	•	•
Delete engineers Print engineers Add test instruments Demo instrument Demo instrument Delete test instruments Demo company Edit my company info Demo company Demo logo			•	•
Print engineers Add test instruments Demo instrument  Delete test instruments Delete test instruments Delete test instruments Demo company Demo company Demo logo Demo logo Edit company logo Demo l			•	•
Add test instruments  Edit test instruments  Delete test instruments  Print test instruments  Edit my company info  Edit my company info  Edit company logo  Demo logo  Demo logo  Demo logo  Demo logo  View Auto Test Codes  Select favorites Auto Test Codes  Print favorites Auto Test Codes  Print All Auto Test Codes  Edit customized Auto Test Codes  Edit customized Auto Test Codes  Edit customized Auto Test Codes  Print			•	•
Edit test instruments  Delete test instruments  Print test instruments  Edit my company info  Edit company logo  Edit company logo  Edit certification logo  Demo logo  Demo logo  Demo logo  Demo logo  Fint favorites Auto Test Codes  Print favorites Auto Test Codes  Print All Auto Test Codes  Print All Auto Test Codes  Edit customized Auto Test Codes  Create customized Auto Test Codes  Delete customized Auto Test Codes  Print Customized Auto Test Codes  Edit customized Auto Test Codes  Copy customized Auto Test Codes  Print Customized Auto Test Codes  Print Gustomized Auto Test Codes  Delete customized Auto Test Codes  Print Gustomized Auto Test Codes  Belete customized Auto Test Codes  Print Gustomized Auto Tes		Demo instrument	•	•
Delete test instruments Print test instruments  Edit my company info Demo company Demo logo Demo logo Demo logo Demo logo Demo logo Demo logo View Auto Test Codes Select favorites Auto Test Codes Print favorites Auto Test Codes Print All Auto Test Codes Print All Auto Test Codes Create customized Auto Test Codes Copy customized Auto Test Codes Delete customized Auto Test Codes Print Customized Auto Test Codes Delete customized Auto Test Codes Print Customized Auto Test Codes Delete customized Auto Test Codes Print Customized Auto Test Codes Delete customized Auto Test Codes Print Customi			•	•
Print test instruments  Demo company Demo logo  View Auto Test Codes Select favorites Auto Test Codes Print favorites Auto Test Codes Print All Auto Test Codes Print Customized Auto Test Codes Delete customized Auto Test Codes Print All A			•	•
Edit my company info Demo company Demo logo Demo logo Edit certification logo Demo logo Demo logo View Auto Test Codes View Auto Test C			•	•
Edit company logo Edit certification logo Demo logo Demo logo View Auto Test Codes Select favorites Auto Test Codes Print favorites Auto Test Codes Print All Auto Test Codes Print All Auto Test Codes Create customized Auto Test Codes Edit customized Auto Test Codes Copy customized Auto Test Codes Delete customized Auto Test Codes Print Customized Auto Test Codes Print Customized Auto Test Codes Delete customized Auto Test Codes Print Customized Auto Test Cod				
Edit company logo Edit certification logo Demo logo Demo logo View Auto Test Codes Select favorites Auto Test Codes Print favorites Auto Test Codes Print All Auto Test Codes Print All Auto Test Codes Create customized Auto Test Codes Edit customized Auto Test Codes Copy customized Auto Test Codes Delete customized Auto Test Codes Print Customized Auto Test Codes Print Customized Auto Test Codes Delete customized Auto Test Codes Print Customized Auto Test Cod	Edit my company info	Demo company	•	•
Edit certification logo  Demo logo  View Auto Test Codes  Select favorites Auto Test Codes  Print favorites Auto Test Codes  Print All Auto Test Codes  Print All Auto Test Codes  Create customized Auto Test Codes  Edit customized Auto Test Codes  Copy customized Auto Test Codes  Copy customized Auto Test Codes  Print Customized Auto Test Codes  Create backup  Restore backup  Maximum users  Add users  Demo logo      Omno logo   Omno logo				•
View Auto Test Codes  Select favorites Auto Test Codes  Print favorites Auto Test Codes  Print All Auto Test Codes  Create customized Auto Test Codes  Edit customized Auto Test Codes  Copy customized Auto Test Codes  Delete customized Auto Test Codes  Print Customized Auto Test Codes  Create backup  Restore backup  Maximum users  1 Demo user  2 Unlimited  Add users		-		•
Select favorites Auto Test Codes Print favorites Auto Test Codes Print All Auto Test Codes Print All Auto Test Codes Create customized Auto Test Codes Edit customized Auto Test Codes Copy customized Auto Test Codes Delete customized Auto Test Codes Print Customized Auto Test Codes Print Customized Auto Test Codes  Create backup Restore backup  Maximum users 1 Demo user 2 Unlimited Add users		ŭ .		
Print favorites Auto Test Codes Print All Auto Test Codes Create customized Auto Test Codes Edit customized Auto Test Codes Copy customized Auto Test Codes Copy customized Auto Test Codes Delete customized Auto Test Codes Print Customized Auto Test Codes Print Customized Auto Test Codes  Create backup Create backup Restore backup  Maximum users 1 Demo user 2 Unlimited Add users	View Auto Test Codes	•	•	•
Print All Auto Test Codes Create customized Auto Test Codes Edit customized Auto Test Codes Copy customized Auto Test Codes Copy customized Auto Test Codes Delete customized Auto Test Codes Print Customized Auto Test Codes Create backup Create backup Restore backup  Maximum users 1 Demo user 2 Unlimited Add users	Select favorites Auto Test Codes		•	•
Print All Auto Test Codes Create customized Auto Test Codes Edit customized Auto Test Codes Copy customized Auto Test Codes Copy customized Auto Test Codes Delete customized Auto Test Codes Print Customized Auto Test Codes Create backup Create backup Restore backup  Maximum users 1 Demo user 2 Unlimited Add users	Print favorites Auto Test Codes		•	•
Create customized Auto Test Codes  Edit customized Auto Test Codes  Copy customized Auto Test Codes  Delete customized Auto Test Codes  Print Customized Auto Test Codes  Create backup  Restore backup  Maximum users  1 Demo user  2 Unlimited  Add users			•	•
Edit customized Auto Test Codes Copy customized Auto Test Codes Delete customized Auto Test Codes Print Customized Auto Test Codes  Create backup Create backup Restore backup  Maximum users 1 Demo user 2 Unlimited Add users				•
Copy customized Auto Test Codes  Delete customized Auto Test Codes  Print Customized Auto Test Codes  Create backup  Restore backup  Maximum users  1 Demo user  2 Unlimited  Add users				•
Delete customized Auto Test Codes Print Customized Auto Test Codes  Create backup Restore backup  Maximum users 1 Demo user 2 Unlimited Add users				•
Print Customized Auto Test Codes  Create backup  Restore backup  Maximum users  1 Demo user  2 Unlimited  Add users				•
Create backup  Restore backup  Maximum users  Add users  Add users  Demouser  2  Unlimited  •  •				•
Restore backup  Maximum users  1 Demo user  2 Unlimited  Add users				
Restore backup  Maximum users  1 Demo user  2 Unlimited  Add users	Create backup		•	•
Maximum users 1 Demo user 2 Unlimited Add users ● ●			•	•
Add users • •				
Add users • •	Maximum users	1 Demo user	2	Unlimited
Edit users • •	Add users		•	•
	Edit users		•	•



# **Specifications (continued)**

Function	Demo	Lite	Advanced
User roles		•	•
Edit user roles		•	•
Print users list		•	•
Edit limits		•	•
Available languages	EN, DE, ES, FI, FR, IT, NL, PL, TR		
Supported Installation certificates	DIN VDE 0701-0702, ÖVE/ÖNORM E 8701, SNR 462638, NEN3140, International template		
Change language	•	•	•
Change country	•	•	•
Change report language			•
Expire duration	60 days (calculated from	Unlimited	
Free updates	installation date)	5 years (calculated from enter serial code date)	
Expiration popup notice	Daily	Every 30 days after 5 year free update period	
Activation date with days left until expiration	•	•	•

#### **System requirements**

Туре	Requirement
Operating System	<ul> <li>Microsoft Windows 10/11, 64-bit and 32-bit (recommended)</li> <li>Microsoft Windows 8/8.1, 64-bit and 32-bit</li> <li>Microsoft Windows 7 with Service Pack 1, 64-bit and 32-bit</li> </ul>
System Memory	Minimum 4 GB RAM (64-bit) or 2 GB RAM (32-bit)
Hard disk space:	Minimum 2 GB available hard disk space
Display resolution:	Minimum screen resolution 1366 x 768
Communication interfaces:	USB

# **Ordering information**

# **FLK-TRUTEST-LITE Software**

TruTest Lite Software Package license code

## **FLK-TRUTEST-ADV Software**

TruTest Advanced Software Package with enhanced functionality license code

# **FLK-TRUTEST-CD Software Disc**

TruTest Software disc (if unable to download from website) License code sold separately.

# **Product bundles**

TruTest Software is also available as part of portable appliance tester or installation tester product bundles. For more information visit **www.fluke.com** or contact your local Fluke representative.

Fluke. Keeping your world up and running.®

#### www.fluke.com

©2022 Fluke Corporation. Specifications subject to change without notice. 08/2022 220487-en

Modification of this document is not permitted without written permission from Fluke Corporation.